
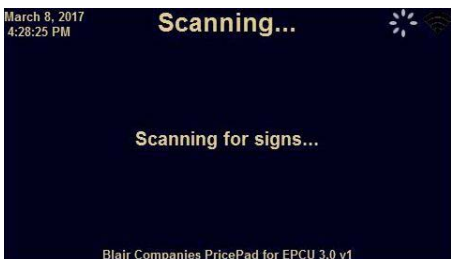


Section 15: PricePad Operation

15.7 Advanced Settings (continued)

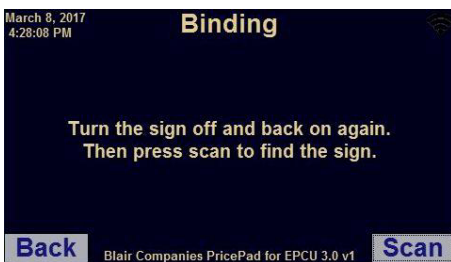

Signs Menu: ⚙️ → Advanced → Signs

The sign settings menu allows signs to be added (bound) and deleted (unbound) from the PricePad. It allows signs to be identified, and the “Number of Faces” setting on each sign to be changed.

Adding a New Sign (Binding):

- Press the “New” button.
- Follow the on screen prompt and power cycle the sign. Then press the “Scan” button.
- Wait for scanning to complete. This may take up to a minute.
- Tap the address of a sign that is ready to bind.
- If there are multiple signs ready to be bound like in the image to the left, pick one by tapping it. Then press “Identify”. This will cause the sign to blink slowly.
- If the correct sign is selected press “Bind” if not press “Back” and try another sign.
- Wait for Binding to complete.
- Press “Back” on the Binding Complete screen.
- If multiple signs were ready to bind, and another on the list needs to be bound, it can be bound at this time.

Sign Settings:

- **Address:** Unique address of the sign (read only).
- **Identify:** Button that causes the sign to blink slowly so it can be identified.
- **Sign Name:** The sign name can be changed for easy sign identification. This is useful if multiple signs are bound to the PricePad.
- **Number of Faces:** Setting on the sign that controls how many sides the sign has. For a normal 2 sided sign “Number of Faces” should be set to 2.
- **Controller Ver.:** Displays controller firmware version (read only).
- **Delete:** The “Delete” button will delete (unbind) the sign from the PricePad.

