


Direct Burial Poles Installation Instructions

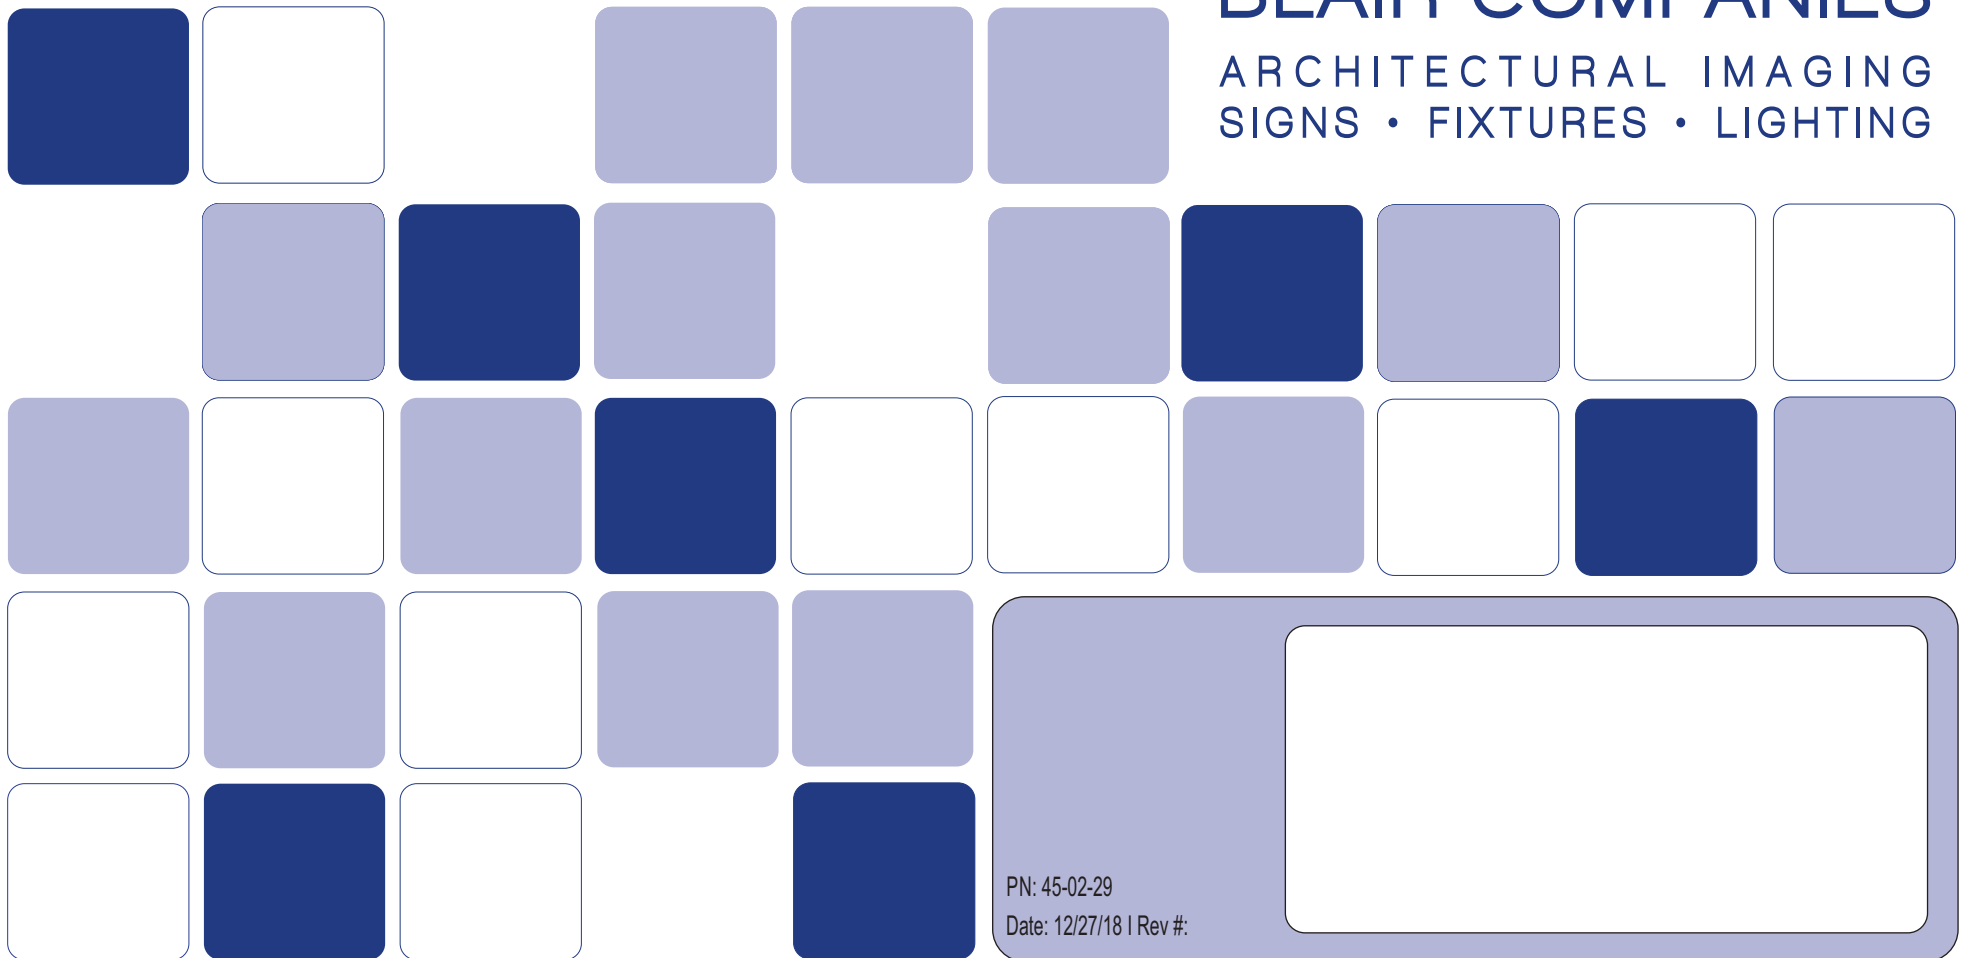


BLAIR COMPANIES
ARCHITECTURAL IMAGING
SIGNS • FIXTURES • LIGHTING






INSTALLATION INSTRUCTIONS

STEP 1

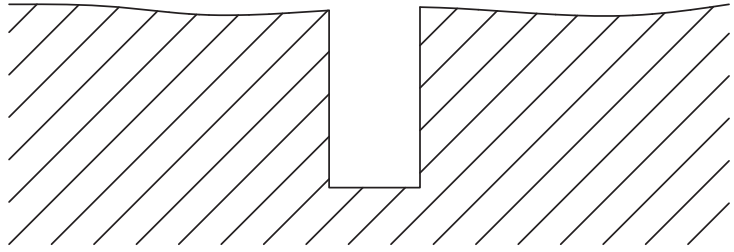


1) Use auger to dig hole to diameter and depth specified by site specific stamped Engineering drawing

STEP 2

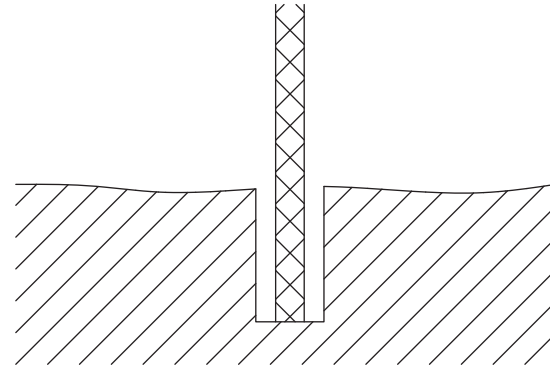


1) Use crane to set pole(s) into hole
2) Be sure to rout any necessary electrical according to site specifics

STEP 3

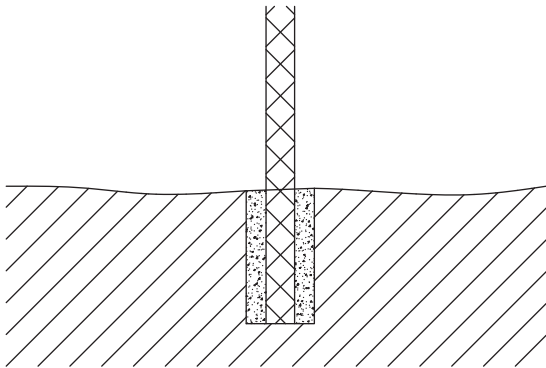

1) Backfill hole with concrete according to Engineering spec

STEP 4

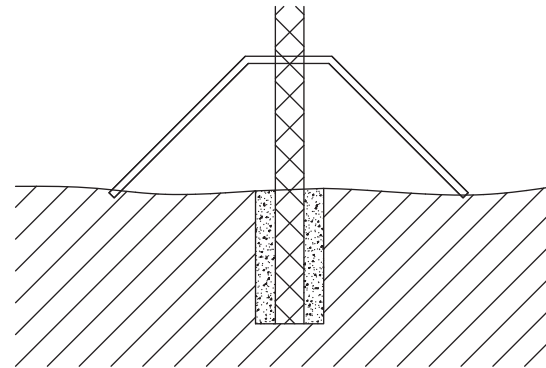

1) Use bracing to secure pole(s) into place
2) Allow concrete to cure for specified time before any further installation



BLAIR COMPANIES
ARCHITECTURAL IMAGING
SIGNS • FIXTURES • LIGHTING

5107 Kissell Ave.
Altoona, PA 16601

P: 814.949.8287

F: 814.949.8293

blaircompanies.com

PRODUCT INFORMATION

Blank lined area for product information.

