Goalpost Cabinet without Shoes Installation Instructions

BLAIR COMPANIES

ARCHITECTURAL IMAGING
SIGNS • FIXTURES • LIGHTING

PN: 45-02-15

Date: 8/20/18 I Rev #

Safety Overview:
-If required, properly barricade the work area
-Follow all required safety precautions, including PPE
-Disable any applicable power before beginning work
-When lifting use proper rigging techniques such as use of spreader bars, etc. and only by a qualified person
-Before, during, and after any work occurs, make sure that the structural integrity of the area being worked on is not compromised
-If you notice any damage of concern inside or outside the specified scope of work, stop work and notify your Supervisor and call your contact at Blair Companies immediately!

General Overview:
-Poles could be existing or new
-If new, mounting points are typically pre-installed along with mounting holes on the side of the cabinet
-Always make sure that power has been disconnected to the sign before beginning work

Equipment/Materials Required:
-Bucket truck
-Crane

Pre-Inspection:
-Look for rust on any existing poles that would affect structural integrity
-make sure all anchor bolts are in good condition and the nuts are tight
-Non-shrink grout should be present and in good condition between base plate and foundation
-Make sure that cabinets are oriented per approval, with consideration to primary traffic flow

This original design is the sole property of Blair Companies. It cannot be reproduced, copied or exhibited, in whole or in part, without first obtaining written consent from Blair Companies.

BLAIR COMPANIES
ARCHITECTURAL IMAGING
SIGNS • FIXTURES • LIGHTING

5107 Kissell Ave.
Altoona, PA 16601

P: 814.949.8287

F: 814.949.8293

blaircompanies.com

PRODUCT INFORMATION

STEP 1

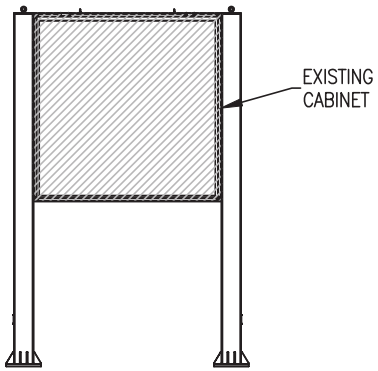

1) Make sure that power has been disconnected from the sign before beginning work
2) Remove the existing cabinet

STEP 2

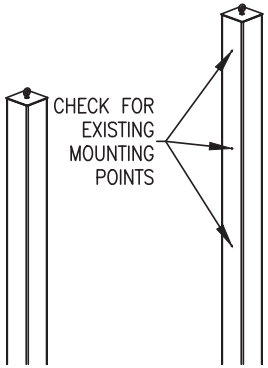

1) If poles are existing, try to reuse mounting hardware and points
2) Drill mounting/access holes into cabinet to match existing layout

STEP 3

1) If face is removable, remove before hoisting into place. If hinged, keep closed until cabinet is hoisted into place
2) Use rigging points and an approved rigging method to lift the cabinet into place

STEP 4

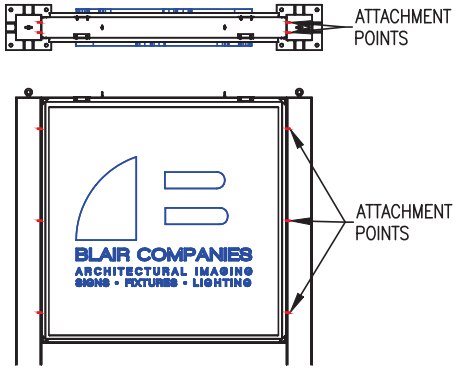

1) If not using existing mounting holes, cabinet should be mounted to the pole in 6 locations on each side as shown

This original design is the sole property of Blair Companies. It cannot be reproduced, copied or exhibited, in whole or in part, without first obtaining written consent from Blair Companies.

BLAIR COMPANIES
ARCHITECTURAL IMAGING
SIGNS • FIXTURES • LIGHTING

5107 Kissell Ave.
Altoona, PA 16601

P: 814.949.8287

F: 814.949.8293

blaircompanies.com

PRODUCT INFORMATION

STEP 5

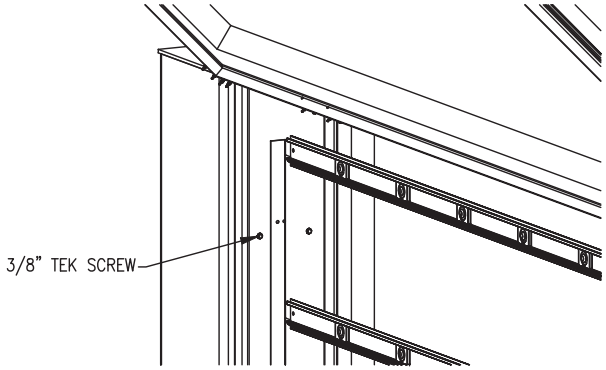

1) If not already removed, hinge the face open
2) Attach the cabinet to the poles with 3/8" TEK screws, 6 per side

STEP 6

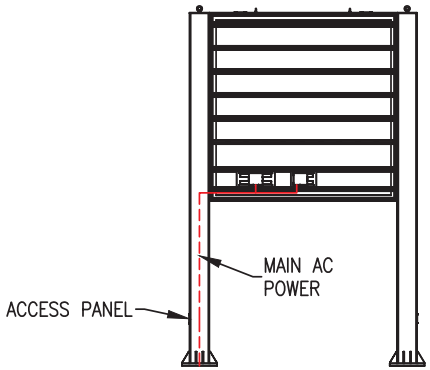

1) Connect the cabinet wiring to the main AC power

STEP 7

1) Reattach or close and fasten the face
2) Wipe down the face with a clean rag, making sure not to scratch the face
3) Power the sign on to confirm proper function

This original design is the sole property of Blair Companies. It cannot be reproduced, copied or exhibited, in whole or in part, without first obtaining written consent from Blair Companies.

BLAIR COMPANIES
ARCHITECTURAL IMAGING
SIGNS • FIXTURES • LIGHTING

5107 Kissell Ave.
Altoona, PA 16601

P: 814.949.8287

F: 814.949.8293

blaircompanies.com

PRODUCT INFORMATION