Canopy Awning Installation Instructions

BLAIR COMPANIES

ARCHITECTURAL IMAGING
SIGNS • FIXTURES • LIGHTING

PN: 45-02-26

Date: 11/19/18 I Rev #

Safety Overview:
- If required, properly barricade the work area
- Follow all required safety precautions, including PPE
- Disable any applicable power before beginning work
- When lifting use proper rigging techniques such as use of spreader bars, etc. and only by a qualified person
- Before, during, and after any work occurs, make sure that the structural integrity of the area being worked on is not compromised
- If you notice any damage of concern inside or outside the specified scope of work, stop work and notify your Supervisor and call your contact at Blair Companies immediately!

General Overview:
-

Equipment/Materials Required:
- Man Lift/Bucket Truck
- Crane

Pre-Inspection:
- Inspect the canopy for any defects
- Proper electric hook up

BLAIR COMPANIES
ARCHITECTURAL IMAGING
SIGNS • FIXTURES • LIGHTING

5107 Kissell Ave.
Altoona, PA 16601

P: 814.949.8287

F: 814.949.8293

blaircompanies.com

PRODUCT INFORMATION

This original design is the sole property of Blair Companies. It cannot be reproduced, copied or exhibited, in whole or in part, without first obtaining written consent from Blair Companies.

STEP 1

1) From a top view, start at the top right corner
2) Work in the direction as shown until all awnings have been installed
   a)Awning section “2” will actually be labeled #1.

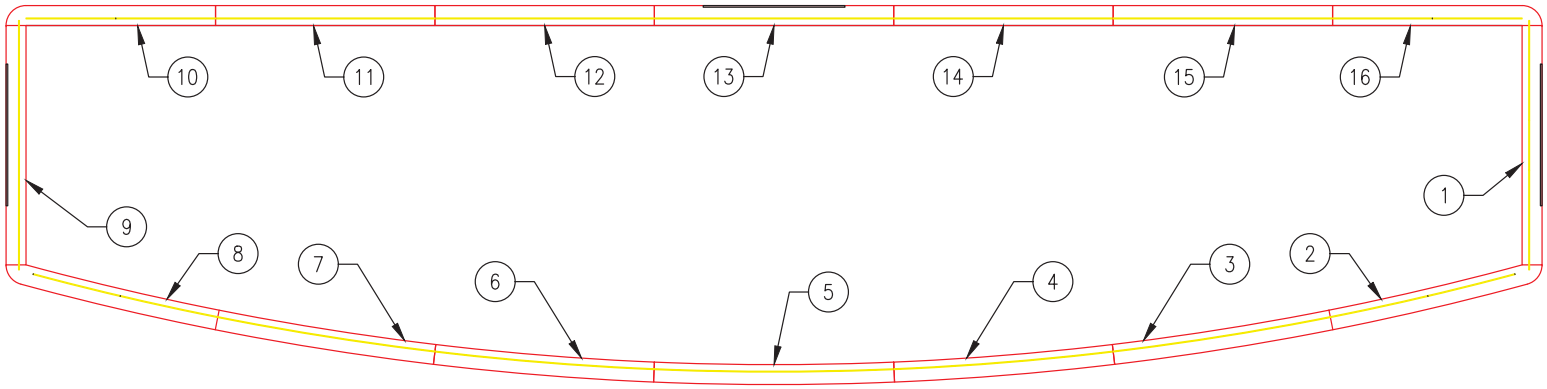

BLAIR COMPANIES
ARCHITECTURAL IMAGING
SIGNS • FIXTURES • LIGHTING

5107 Kissell Ave.
Altoona, PA 16601

P: 814.949.8287

F: 814.949.8293

blaircompanies.com

PRODUCT INFORMATION

This original design is the sole property of Blair Companies. It cannot be reproduced, copied or exhibited, in whole or in part, without first obtaining written consent from Blair Companies.

STEP 2

1) Lift canopy by using smaller clevis and attaching to middle mounting shoes
2) Connect end mounting shoes to canopy with 3/8” bolts
3) Remove clevises and attach remaining mounting shoes to canopy
4) Using all thread and Unistrut track, attach the bottom of the awning to the canopy structure
5) Connect awning sections to each other horizontally through outer ribs with 1/4” hardware
6) Run power from section to section as noted, running through back to primary wiring at shortest distance to junction box

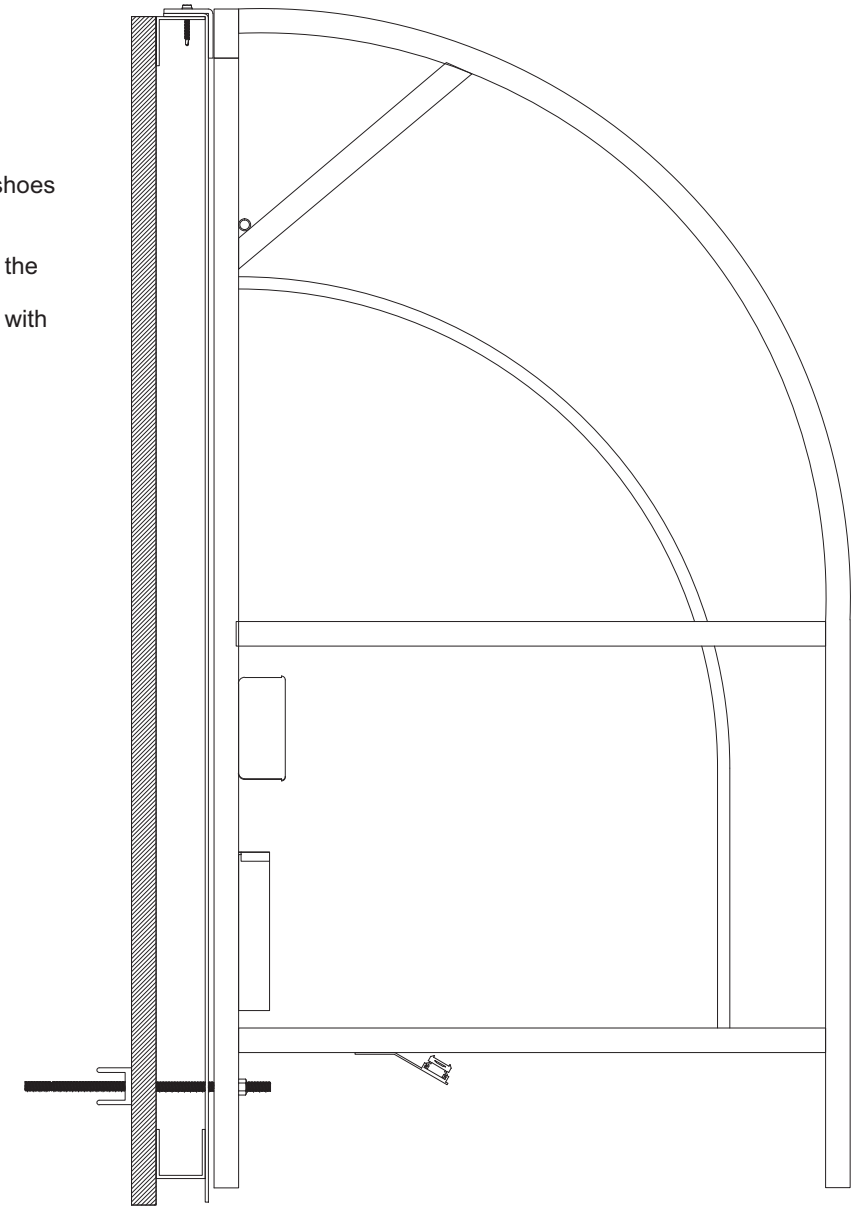

BLAIR COMPANIES
ARCHITECTURAL IMAGING
SIGNS • FIXTURES • LIGHTING

5107 Kissell Ave.
Altoona, PA 16601

P: 814.949.8287

F: 814.949.8293

blaircompanies.com

PRODUCT INFORMATION

This original design is the sole property of Blair Companies. It cannot be reproduced, copied or exhibited, in whole or in part, without first obtaining written consent from Blair Companies.